


GALA

Processing instructions
Manuel d'instruction
Verarbeitungshinweise

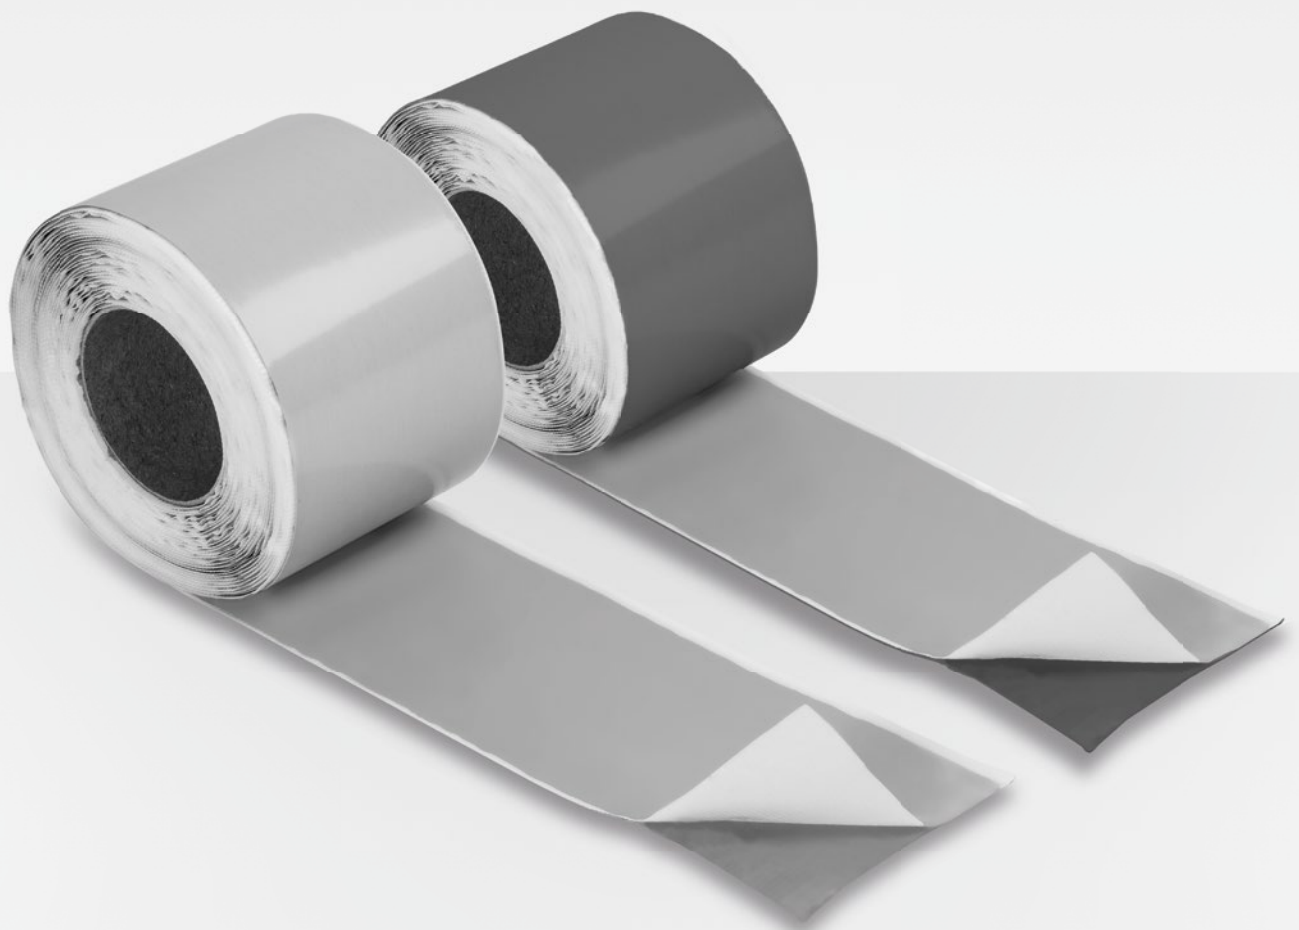



Processing

- 1** Take the Gala-Quick roll out of the packaging and remove the protective film.
- 2** Clean soil, dirt etc. off the concrete back/inside of the construction elements and pre-treat with primer if necessary.
- 3** Measure the required tape length.
- 4** Roll out Gala-Quick, measure and cut through with e.g. a cutter knife.
- 5** Apply Gala-Quick strips from below to the joint to be bonded and peel off a piece of the adhesive film.
- 6** Fix the Gala-Quick strip upwards by further peeling off the adhesive foil.
- 7** Press the Gala Quick Tape firmly with a pressure roller.
- 8** Backfill the soil. Finished!

These installation instructions show examples, other procedures are also possible. Do not apply at temperatures below +5° and in the rain. The substrate must be dry, stable, free of dust and release agents.

Instructions

- 1** Sortez le rouleau Gala-Quick de son emballage et retirez le film protecteur.
- 2** Nettoyez l'arrière/intérieur des éléments de construction de la terre, de la saleté, etc. et prétraitez-les avec un apprêt si nécessaire.
- 3** Mesurer la longueur de bande requise.
- 4** Dérouler le Gala-Quick, mesurer et couper avec par exemple un cutter.
- 5** Appliquez des bandes de Gala-Quick par le bas sur le joint à coller et retirez un morceau du film adhésif.
- 6** Fixez la bande Gala-Quick vers le haut en retirant le film adhésif.
- 7** Appuyez fermement sur la bande Gala Quick à l'aide d'un rouleau de pression.
- 8** Remblayez le sol. Prêts !

Ces instructions d'installation montrent des exemples, d'autres procédures sont également possibles. Ne pas appliquer à des températures inférieures à +5° et sous la pluie. Le support doit être sec, stable, exempt de poussière et d'agents de démoulage.

Verarbeitung

- 1** Gala-Quick-Rolle aus der Verpackung nehmen und die Schutzfolie entfernen.
- 2** Betonrückseite/Innenseite der Bauelemente von Erdreich, Schmutz ect. säubern und ggf. mit Primer vorbehandeln.
- 3** Benötigte Bandlänge ausmessen.
- 4** Gala-Quick ausrollen, abmessen und mit z. B. einem Cuttermesser durchtrennen.
- 5** Gala-Quick Streifen von unten an die zu verklebende Fuge anlegen und dabei die Haftfolie ein Stück abziehen.
- 6** Gala-Quick Streifen nach oben hin durch weiteres Abziehen der Haftfolie fixieren.
- 7** Mit einer Andrückrolle das Gala-Quick-Band fest andrücken.
- 8** Erdreich anschütten. Fertig!

Diese Verlegeanleitung zeigt Beispiele, auch andere Vorgehensweisen/Abläufe sind in der Anwendung möglich. Nicht bei unter +5° und bei Regen verarbeiten. Der Untergrund muss trocken, tragfähig, staub- und trennmittelfrei sein.



ENERGY



VENTILATION



BUILDING

Nederland • 📞 +31 313 480-300 • @ productadvieslijn@ubbink.nl

France • 📞 +33 (0)2 51 13 46 46 • @ ubbink@ubbink.fr

Belgium • 📞 +32 9 237 11 00 • @ info.bouw@ubbink.be

United Kingdom • 📞 +44 1604 433-000 • @ info@ubbink.co.uk

Deutschland • 📞 +49 2301 91011-0 • @ info@ubbink.de

Italia • 📞 +39 045 602 0433 • @ info@ubbink.it



Ubbink International

@ info@ubbink.com • 🌐 www.ubbink.com

Copyright © 2024 Ubbink | Content is subject to change without notice; no liability for errors and misprints.
Availability and configurations may differ per country | UB-2024-01-V01