


Issue 1

Ubbink UB62 Fixing Guidelines


Minimum Pitch 22 Degrees



1. Complete roofing to point where unit is to be located.
2. Determine the position of the tile vent (ideally mid span between rafters).
3. Mark the dimensions as below onto the felt, cut the felt as shown indicated by the thicker lines.

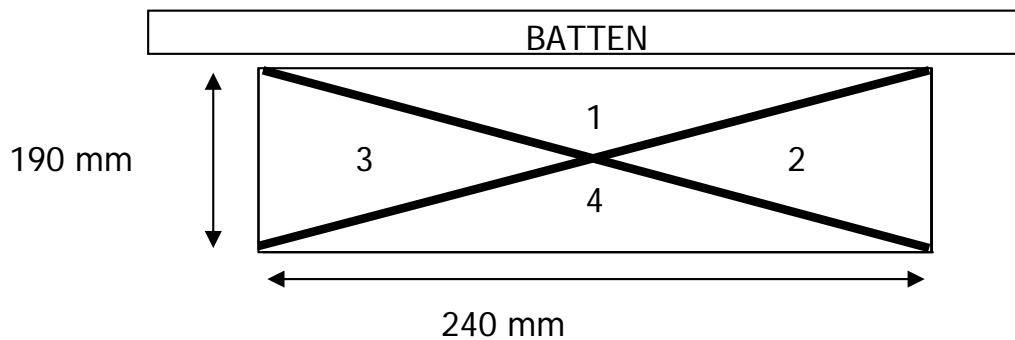

4. Wrap cut flap No1 over batten and fix with tack nail.
Flaps 2 & 3 fold over to the side, Flap 4 fold to bottom

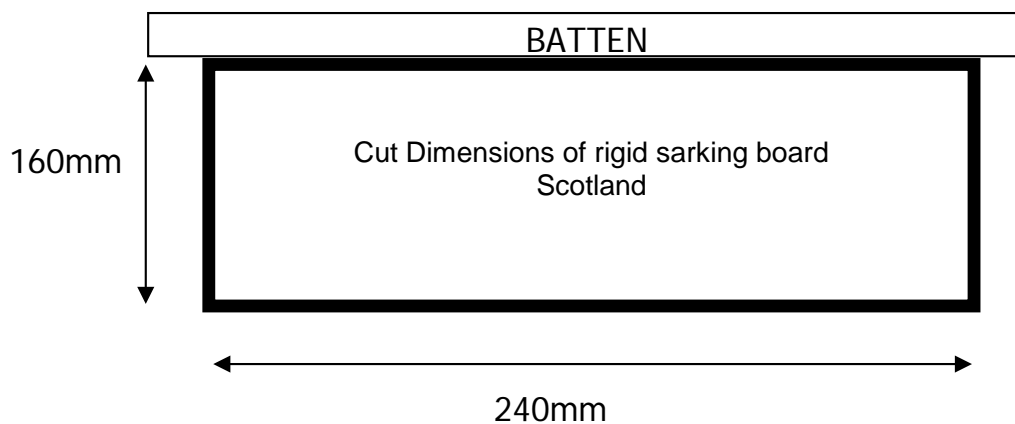

5. Cut sarking board as per dimension above. Top cut line directly under batten.
6. Place unit in position .
7. Complete tiling in the normal manner.
8. Where applicable - a tile clip provided for use at the bottom RH edge of the vent/ terminal - clamping it to the next conventional tile.